


Holder Bracket


Lifting out the holder
bracket after removing
3 screws

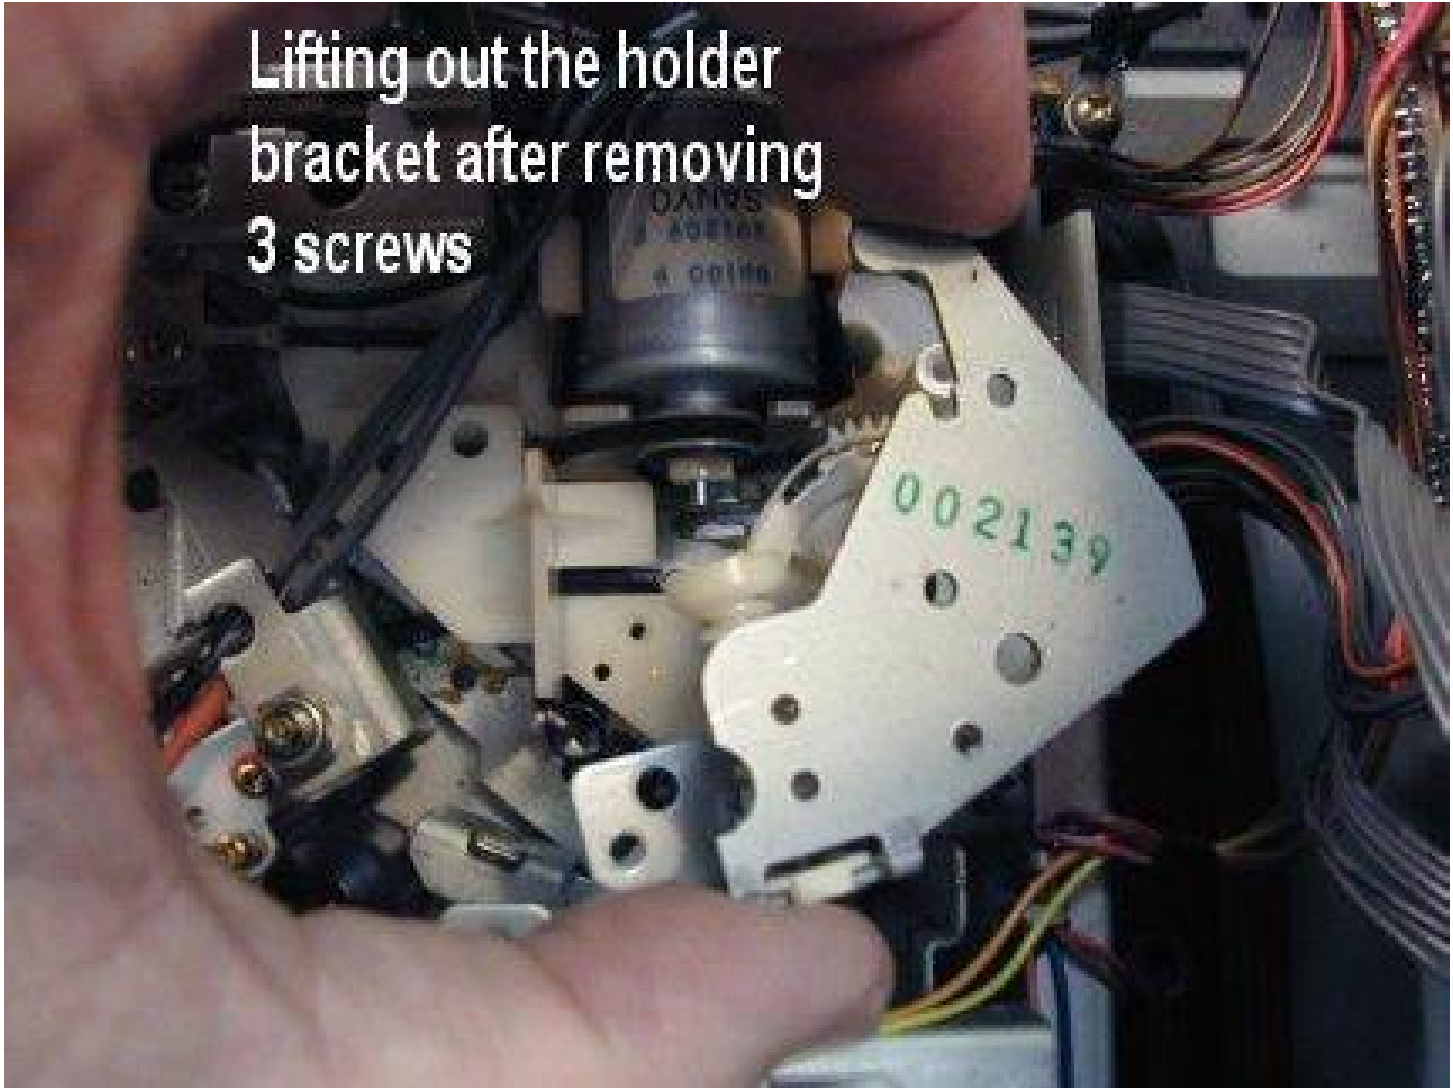




Removing the
loading belt

Gripping the pinch roller retainer cap with pliers. Twist and pull up gently.

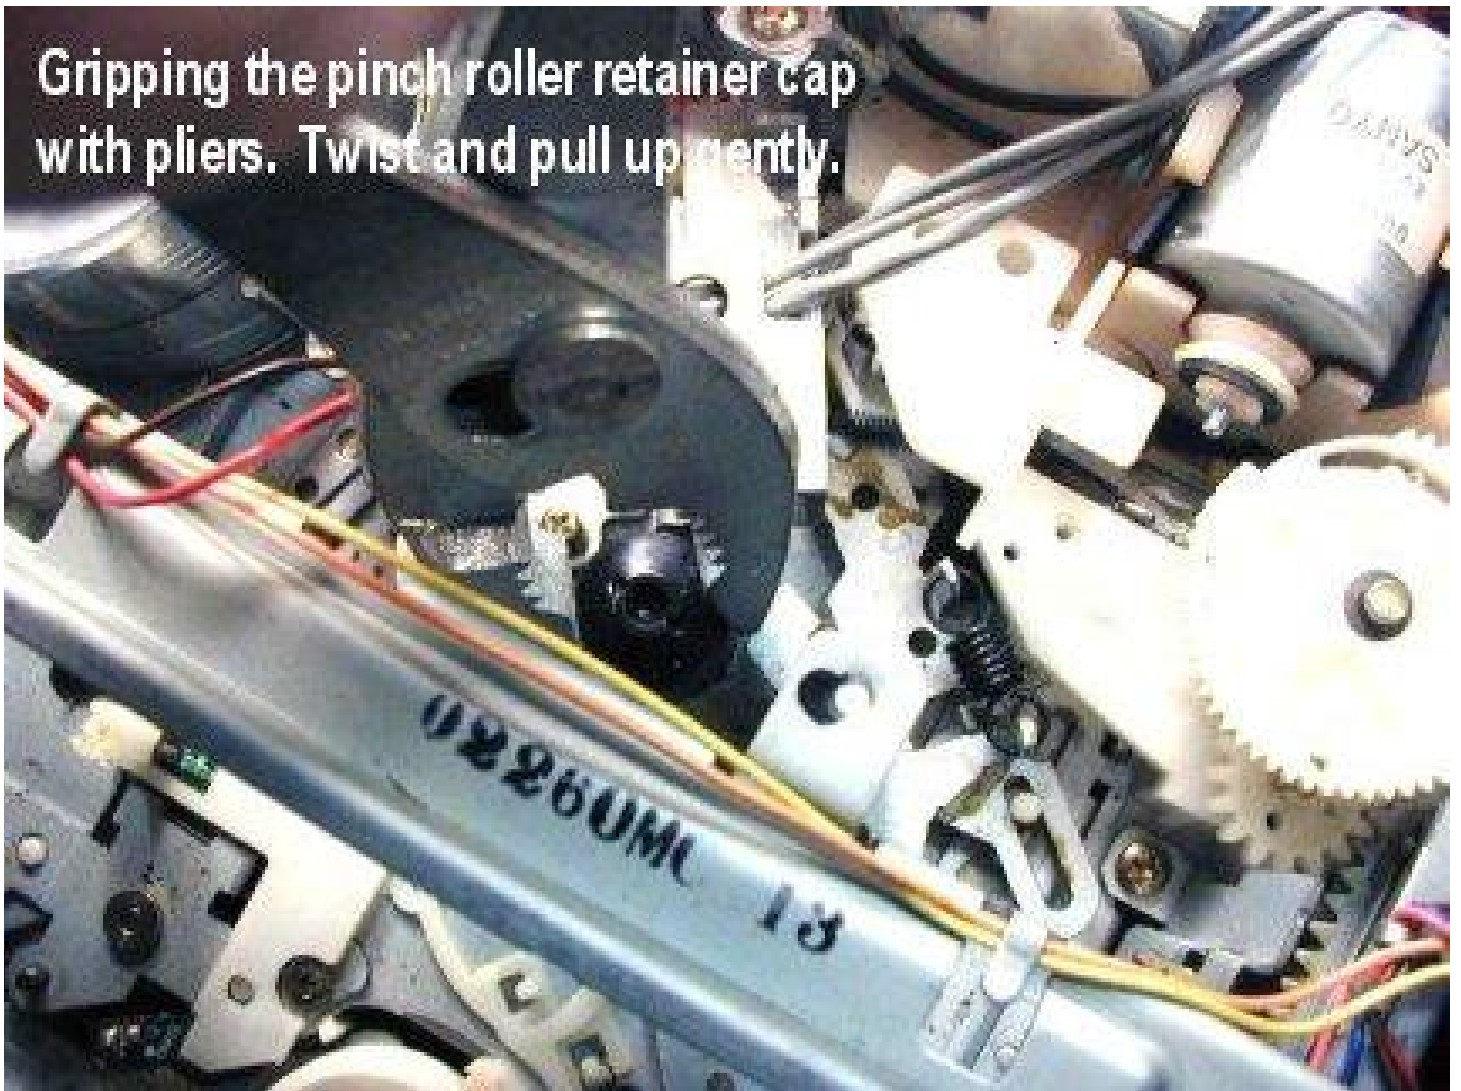



Pinch roller retainer cap
now removed.

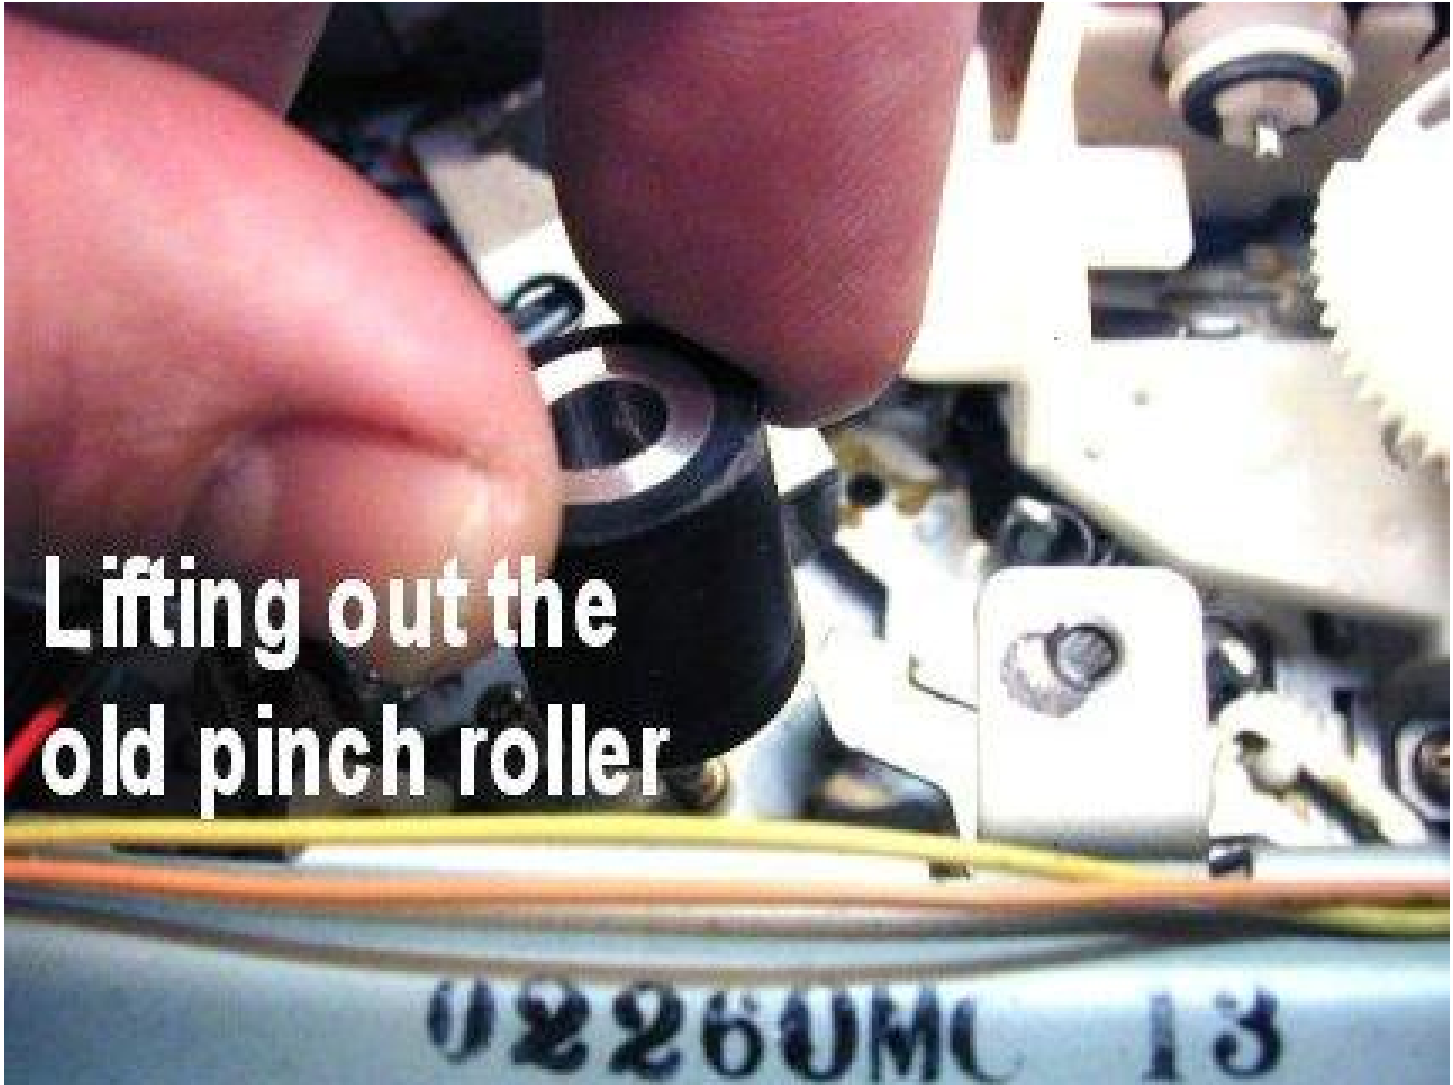

Lifting out the
old pinch roller

02260MC 13