


Installation

Install the new take-up lever, aligning it with the teeth in the take-up arm, as shown.

Make sure there is not excessive "play" in the mesh between the teeth of the metal take-up arm and the plastic take-up lever. If there is sloppiness in the mesh, remove the take-up arm from the unit and bend the post a little at a time until gear mesh is at a minimum, but not so tight as to be binding.

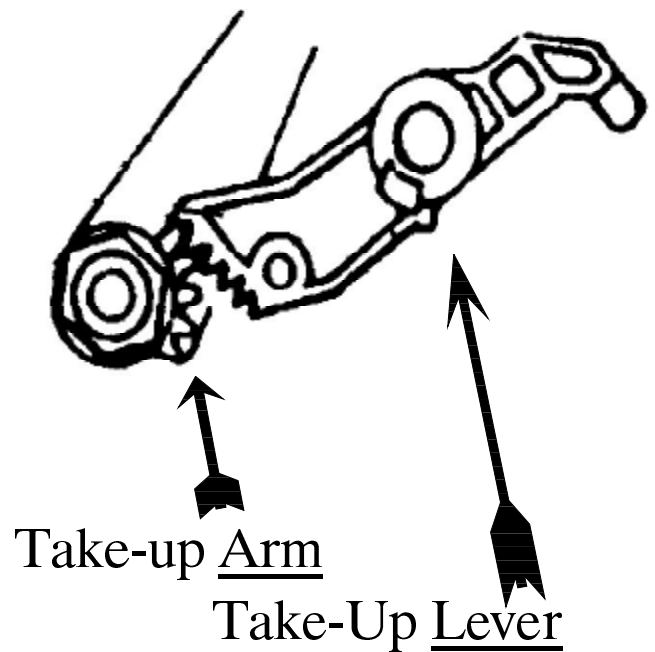

See Figure D-3.

At the top of the deck replace the Pinch gear. The large hole (A) should line up with the hole in the chassis. Hole (D) on the PC gear should line up with hole (C) on the pinch gear. Hole (E) in the chassis will line up with the large hole in the PC gear.

WATCH OUT FOR BROKEN OR BENT TEETH ON WORM WHEEL

